

Cat. No. 63-5097
OWNER'S MANUAL

Please read before
using this equipment.

**Chronograph
Alarm Watch**



RadioShack®

FEATURES

Your RadioShack Chronograph Alarm Watch is a precision timepiece that combines advanced electronic technology with fashionable design. This watch also functions as an alarm clock and chronograph (stopwatch). Its features include:

Date / Time Display — shows the month, day, day of the week, and time in AM/PM or 24-hour format.

Daily Alarm and Hourly Chime — lets you set the watch to sound an alarm every day at a preset time and a chime on the hour.

© 1997 Tandy Corporation.
All Rights Reserved.
RadioShack is a
registered trademark used
by Tandy Corporation.

Stopwatch — lets you time events up to 24 hours and record split times.

Water Resistant — lets you submerge the watch to a maximum depth of 98 feet (30 meters).

Caution: This watch is water resistant while bathing or showering, or while playing water sports in shallow water. It is not recommended for use while deep sea diving or platform diving. The watch is water resistant, not waterproof.

CONTENTS

Operation	5
Operation Modes . .	5
Using the Light	6
Setting the Time and Date	6
Selecting the Date Display Format	9
Selecting the Time Display Format . .	10
Using the Hourly Chime/Daily Alarm	11
Setting the Chime	12
Setting an Alarm Time	12
Turning the Alarm On/Off	14
Using the Stopwatch	15
Care	18
Replacing the Battery	20

OPERATION

OPERATION MODES

This watch has four different modes:

Time Display — displays the hour, minutes, seconds, and week-day.

Date — lets you set and display the correct date.

Alarm — lets you set and display the alarm time.

Chronograph (Stopwatch) — lets you time an event from start to finish and track laps with split times.

USING THE LIGHT

To view the display in the dark, hold down **LIGHT**. The display lights.

SETTING THE TIME AND DATE

1. Hold down **MODE** until the Monday bar, hour digits, and **A** or **P** (in the 12-hour mode) flash.

-
-
2. Release **MODE**, then press it again. The Tuesday bar and seconds digits flash.
 3. Press **LAP/RESET** to reset the seconds digits to 00.

Note: If the seconds displayed was greater than 29, one minute is added to the minute digits.

-
-
4. Press **ST/STOP** (Start/Stop) to select the digits you want to set. The selected digits flash.

illus of ST/STOP
location

Then press **LAP/RESET** to advance the flashing digits.

Notes:

- The sequence is seconds, minutes, hours, month (or day), day (or month), and weekday. See “Selecting the Date Display Format” on Page 9.



- Hold down **LAP/RESET** to quickly advance the flashing digit.
5. Press **MODE** when you finish setting the time and date.

Selecting the Date Display Format

To switch the month and day position when the time display is showing, hold down **ST/STOP** then press **LAP/RESET**.

Selecting the Time Display Format

To switch between the AM/PM and 24-hour format display, hold down **LAP/RESET**, then press **MODE** when the alarm time is showing.


In the AM/PM format, **AM** or **PM** appears to the left of the hour.

USING THE HOURLY CHIME/DAILY ALARM

You can set an hourly chime and a daily alarm. The hourly chime sounds at the beginning of each hour. The daily alarm sounds for 30 seconds at the set alarm time. To stop it sooner, press **LAP/RESET**.

To hear what the chime and alarm sound like, hold down **LAP/RESET**, then press **ST/STOP**. First the chime sounds and the chime symbol appears. Press **ST/STOP** again to have the alarm sound and the alarm symbol appear.

Setting the Chime

To turn on or off the hourly chime, from the time display, hold down **LAP/RESET** and repeatedly press **ST/STOP** so the chime symbol () appears or disappears.

Setting an Alarm Time

1. Hold down **MODE** until the Monday bar, the hour digits, and **A** or **P** flash.

-
-
2. Press **LAP/RESET** to advance the hour digits.

Notes:

- Hold down **LAP/RESET** to quickly advance the digits.
 - If you are using the AM/PM format, **A** (for AM) or **P** (for PM) appears.
3. Press **ST/STOP**.
The minute digits flash.
 4. Press **LAP/RESET** to advance the minute digits.

-
5. After setting the alarm time, press **MODE** to return to the time display.

To view the preset alarm time, from the time display, hold down **LAP/RESET**.

Turning the Alarm On/Off

From the time display, hold down **LAP/RESET**, then repeatedly press **ST/STOP** to turn on or off the alarm. The watch beeps and •)))) appears if the alarm is turned on.

Note: You must turn off the chime before turning off the alarm, then turn the chime back on, if desired.

USING THE STOPWATCH

The stopwatch counts elapsed time up to 24 hours. After 40 minutes, hundredths of a second no longer show.

Note: Once 23 hours, 59 minutes, 59.99 seconds is reached, the stopwatch resets and continues counting from 0 00 00.

-
1. Hold down **MODE** until 0 00 00 appears.
 2. Press **ST/STOP** to start the stopwatch.
 3. To measure split time, press **LAP/RESET** while the stopwatch is running. The stopwatch time display stops, but the stopwatch continues to run. After you record the split time, press **LAP/RESET** to return to the running time display.

Note: Split time is the time elapsed from the stopwatch start time.

4. Press **ST/STOP** again to stop the stopwatch.
5. Press **LAP/RESET** to reset the stopwatch display to 0 00 00.
6. Press **MODE** to return to the time display.

CARE

To enjoy your RadioShack Chronograph Alarm Watch for years:

- Use and store the watch only in normal temperature environments.
- Handle the watch gently and carefully.
- Keep the watch away from dust and dirt.
- Wipe the watch with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and invalidate your watch's warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

REPLACING THE BATTERY

If the watch slows or the display dims, follow these steps to replace the 3V lithium CR2016 battery. We recommend RadioShack Cat. No. 23-160.

1. Insert a small flat-blade screwdriver under the notch of the watch's case and pry off the back of the case.

-
-
2. Remove the insulator sheet.
 3. Use a Phillips screwdriver to remove one of the screws from the battery holder.
 4. Lift the battery holder out of the way, remove the old battery, and install a new one with the positive (+) side up.

Warning: Immediately discard the old battery. Keep the battery out of reach of children. Swallowing a button-cell battery could be fatal.

Caution: Use only a fresh battery of the required size and type. Always remove an old or weak battery.

5. Replace the battery holder cover and secure it with the screw you removed in Step 3.
6. Replace the insulator sheet and the back of the watch's case.

Caution: Be sure the arrow on the back of the case points toward **LIGHT**. Otherwise, the alarm will not sound.

NOTES





Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

(continued)

(continued) In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations,
Dept. W, 100 Throckmorton St.,
Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97